


Receptacle Assembly

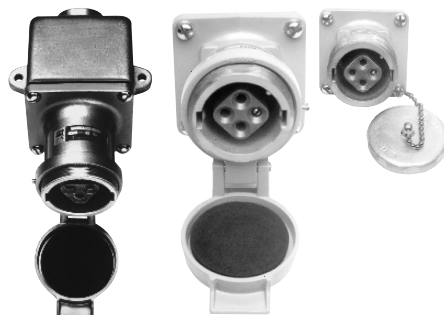

Receptacle



Mating Plug



Mating Connector



Style 1

With AJ Back Boxes and Angle Adapters


with ARE Back Boxes

Receptacle Housing Only


Description	Hub Size	Spring Door Cat. #	Threaded Cap Only Cat. #	Spring Door Cat. #	Spring Door Cat. #	Threaded Cap Only Cat. #	Cable Dia.	Cat. #	Cat. #
2-wire, 2-pole }	1 1 1/4	AREA6213 AREA6214		ARE6213 ARE6214	AR621	AR627	0.50 to 1.45	APJ6275	APR6255
3-wire, 3-pole }	1 1 1/4	AREA6313 AREA6314		ARE6313 ARE6314	AR631	AR637	0.50 to 1.45	APJ6375	APR6355
4-wire, 4-pole }	1 1/4 1 1/2	AREA6414 AREA6415		ARE6414 ARE6415	AR641		0.50 to 1.45	APJ6475	APR6455
5-wire, 5-pole }	1 1/4 1 1/2		AREA6574 AREA6575			AR657	0.50 to 1.45	APJ6575	
Style 2									
2-wire, 3-pole }	1 1 1/4	AREA6323 AREA6324		ARE6323 ARE6324	AR632	AR638	0.50 to 1.45	APJ6385	APR6365
3-wire, 4-pole }	1 1/4 1 1/2	AREA6424 AREA6425		ARE6424 ARE6425	AR642	AR648	0.50 to 1.45	APJ6485	APR6465
4-wire, 5-pole }	1 1/4 1 1/2		AREA6584 AREA6585			AR658	0.75 to 1.45	APJ6585	APR6585 APR6567

Dimensions


ARE Assembly

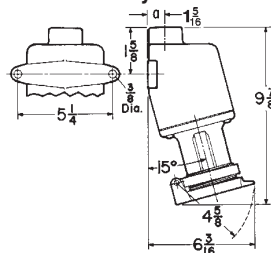


AR Receptacle - Spring Door

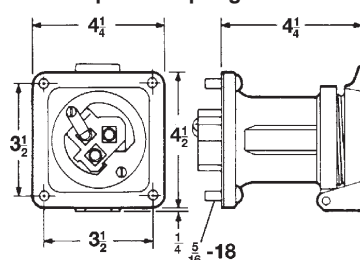


AR Receptacle - Open and with cap

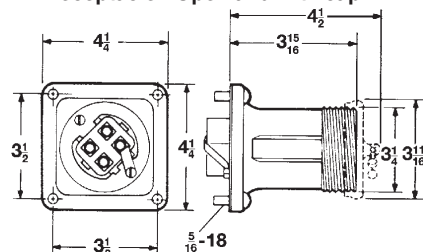

APJ Plug

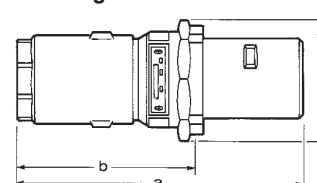

APR Connector

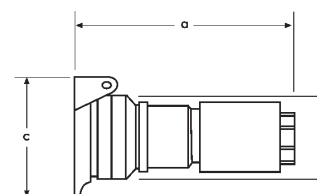

Config	Plug			Connector		
	a	b	c	a	b	c
2P or 3P	8 1/2	5 3/4	3 5/8	6 1/2	3 5/8	2 15/16
4P	8 1/2	5 13/16	3 3/4	8 1/4	3 5/8	2 15/16
5P	9	6 3/16	4 7/16	8 1/4	3 5/8	3 1/4

** For use on systems less than 60 hertz the receptacles, plugs and connectors are for disconnect use only.